

 
SWIMMER DECOY XS HIGDON OUTDOORS

INCLUDED PARTS:

- [A] Swimmer Decoy with attached bilge pump
- [B] 2.5" Clear Tubing Insert
- [C] Charger & Quick Connect cables

INTERNAL PARTS:

- #3 Timer (Internal)
- 12V Battery (3 amp)
- Quick Connect Cables

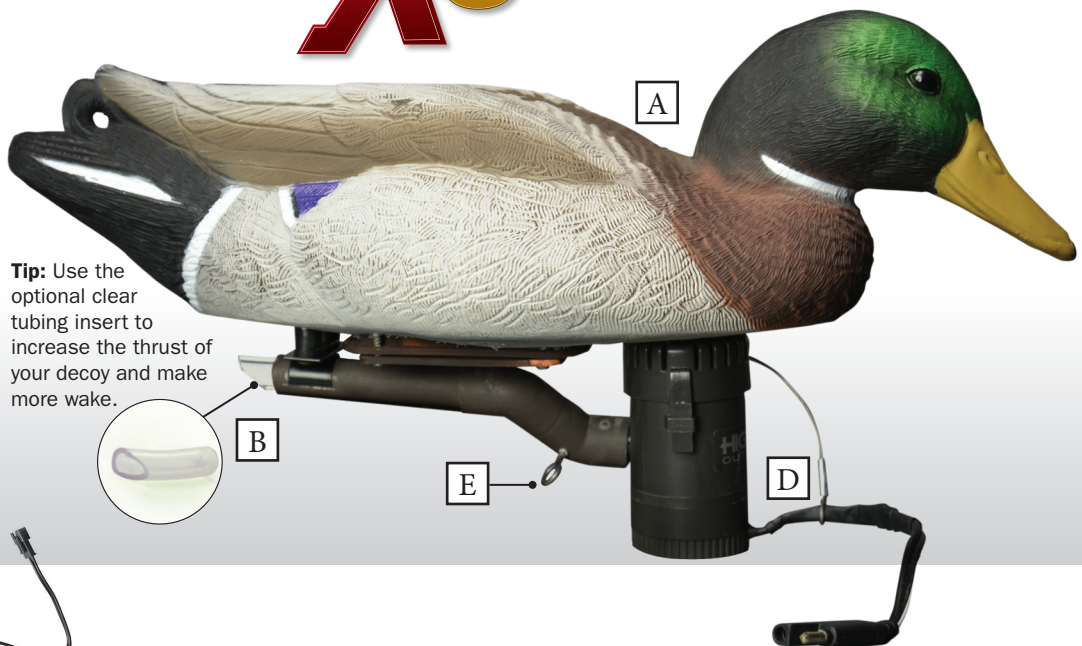


Tip: Use the optional clear tubing insert to increase the thrust of your decoy and make more wake.



INSTRUCTIONS FOR USE:

1. Slip keeper cable loop over bilge pump lead and pull tight. (Fig. D)
2. Connect bilge pump lead to battery box lead on bottom of decoy by pushing together firmly. (Fig. F)
3. Pump should cycle at this point.
5. Attach a decoy weight and line (not included) to decoy eye hook (Fig. E). Line length should be water depth plus 12 inches to allow adequate movement without tangling in other decoys.
4. Place decoy in water.

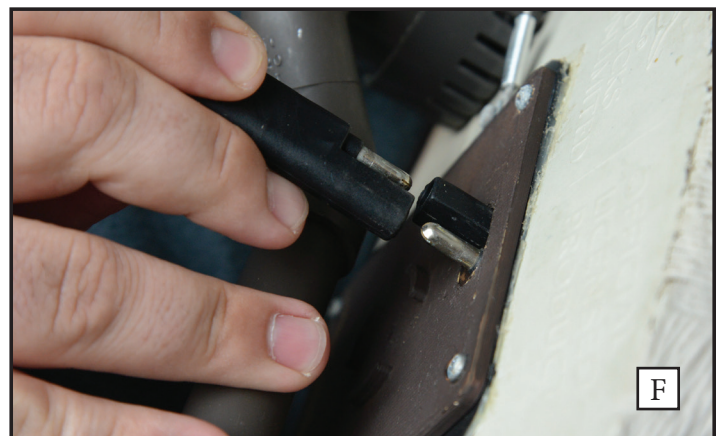

BILGE PUMP CLEANING:

1. The bilge pump and pipe can easily be taken off the decoy for cleaning in case of debris clogging up the bilge pump.
2. To clean, simply unsnap the bilge from the bottom of the decoy. Clean out grass and debris.
3. Once the bilge is running properly, snap bilge pump back on.

MAINTENANCE AND OTHER TIPS:


1. Recharging the battery: Overnight charging (around 6 hours) after each hunt is recommended to keep the battery in good condition.
2. Storing the battery: charge fully and keep at room temperature during the off season. We recommend fully charging every three months. Never store battery for any period of time with no charge. Battery can last at full capacity for four years if maintained this way.

QUESTIONS? CALL!
270-443-8739

Find us online!



ALSO AVAILABLE IN:

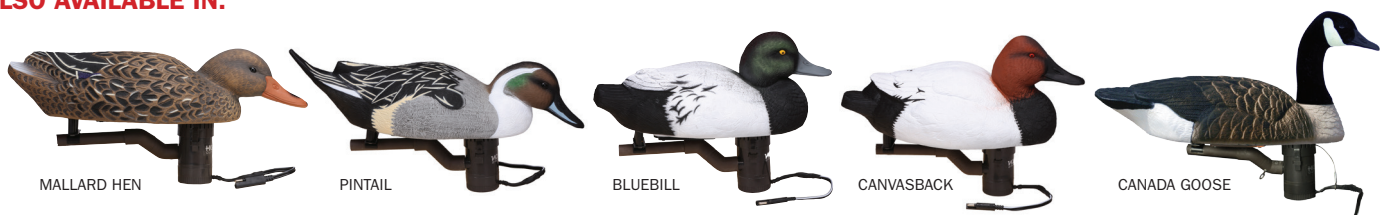

For decoy bags, 12v batteries, chargers, timers, and any other parts contact your local dealer or visit our website at www.higdonoutdoors.com.