

# ICotec

Electronic Game Calls

## GC300 Electronic Predator Call Operating Instructions



**CALL OF THE WILD**  
A NEW REVOLUTION IN ELECTRONIC GAME CALLERS

### 1 YEAR LIMITED WARRANTY (Register within 15 days of purchase)

Your ICotec product is warranted to be free of material defects and workmanship for 1 year after the date of purchase. In the event of a defect under this warranty, we will, at our option, repair or replace the product, provided that you return the product postage prepaid. This warranty does not cover damages caused by misuse, improper handling, installation, or maintenance provided by someone other than an authorized service contractor. Any return made under this warranty must be accompanied by the items listed below:

- 1) A check/money order in the amount of \$12.00 to cover the cost of postage and handling
- 2) Name and address
- 3) An explanation of the defect
- 4) Proof of purchase with date of purchase
- 5) Product should be well packed in a sturdy shipping carton with return postage prepaid to the address listed below:

### Attn.: Repairs

ICotec  
6415 Angola Rd.  
Holland, OH 43528

This warranty gives you specific legal rights.

Specifications and product designs are subject to change without prior notice or obligation.

©2013 ICotec. All rights reserved.

## Thank you for the purchase!

Please fill out your product registration information and mail it back to us **within 15 days** of your purchase date. Or, you may go to our web site to register your product. Please retain your original receipt in the event that you would need to return the unit for a warranty repair.

*Failure to mail in your product registration card, or registering your product on our web site within the 15 day period of the purchase will result in the voiding of the warranty.*

Name: \_\_\_\_\_

Phone Number: \_\_\_\_\_

Street Address: \_\_\_\_\_

City: \_\_\_\_\_

State: \_\_\_\_\_

Zip: \_\_\_\_\_

Email Address: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

Place Purchased: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Serial # on label in battery compartment.

# Setup & Operation Instructions

## ICOTec GC300 Electronic Predator Call

To remove remote from unit, slide toward the rear of unit. Remote is very snug the first time you remove it, for better results hold unit against your body speaker facing away and pull remote toward you.

1

### Add Batteries

Open battery panel with phillip screw driver, place 4 new AA batteries as indicated, close panel and replace screw. Lithium Ion for best results in cold weather.

2

### Turn Power Switch On

Slide switch to the right, red LED indicator will light up if unit is on. If it does not light up, open panel and be sure all batteries are new and in proper position.

3

### Raise Antenna

Place antenna in upright position on main unit.

4

### Select Prey Call

Raise antenna on remote control and press button of desired call sound. All calls cycle through a pattern of natural pauses. Your unit will play several seconds (30-40) and then go silent (20-30) seconds and then play again indefinitely until you select stop. This is to eliminate the need for you to select stop and start several times per set.

5

### Adjust Volume

Press volume up arrow for louder or volume down arrow for quieter.

6

### Add Second Call

Press second desired call sound, both calls play until you select STOP.

7

### End Calls

Press STOP.

### Lost Your Remote?

For replacement remote or for an additional remote call 419-472-3300 x113 or email your name, shipping address and phone number for a paypal invoice to be emailed to you. Remotes are \$25 plus \$6.00 shipping.

### Resynchronizing Remote to Unit

Your ICOTec remote can be reprogrammed to work with your base unit if it happens to become unresponsive or if you lose your remote and purchase a new one from ICOTec. Simply press and hold the reset button on the left of the "ON/OFF" switch of the base with a paperclip, then press and hold any sound button on the remote unit for three seconds.

**Note:** Base unit must be playing a sound when the programming unit successfully.

### Trouble Shooting

**Unit does not play calls** - Be sure batteries are NEW and are installed properly, if you press a call button on the remote and the green LED light blinks, you need to replace the 23A lithium battery in the remote. Remove the screw holding on the battery door, remove, dispose of properly and replace as indicated.

Check out more of our products at your favorite retailer or online at [icotec.com](http://icotec.com).

If your retailer does not yet carry our products, ask them to.

To find a dealer near you, log on to [icotec.com](http://icotec.com) and select the Dealer List



ICOTec hats are coming soon!

**ICOTec**

**GC300 Electronic Predator Call  
Warranty Registration Card**

**Mail to:**

**ICOTec**

**ATTN: Warranty Department**

6415 Angola Road

Holland, OH 43528

**Or, Log on to:**

[www.icotec.com](http://www.icotec.com)

### Predator Calls (GC300)

Coyote Female	Bobcat Adult
Coyote Howl	Cottontail Distress
Coyote Male	Coyote Pup Distress
Crow Baby Distress	Fawn Distress
Raccoon Baby Distress	Gray Fox Distress
Woodpecker Baby Distress	Jack Rabbit Distress