©2014 ICOtec. All rights reserved.

6415 Angola Rd Holland, OH 43528

Attn.: Repairs

return postage

prepaid to the

address listed below:

Proof of purchase with date of purchase

An explanation of the defect

Name and address

This warranty gives you specific legal rights.

Date of Purchase:

Serial Number:

Serial # on label in battery compartment.

subject to change without prior notice or



GC101XL Electronic Predator Call Operating Instructions



Thank you for purchasing the ICOtec GC101XL **Programmable Electronic Game Call.**

This manual will walk you through step by step setup and operation of the unit and the remote. Should you have any questions, please contact us at info@icotec.com.

1 YEAR LIMITED WARRANTY (Register within 15 days of purchase)

Thank you for the

purchase!

by the items listed below: or maintenance provided by someone other than not cover damages caused by misuse, improper handling, installation, provided that you return the product postage prepaid. under this warranty, we will, at our option, repair or replace the product, workmanship for 1 year after the date of purchase. In the event of a defect Your ICOtec product is warranted to be free of material defects and This warranty does

postage and handling A check/money order in the amount of \$12.00 to cover the cost of

5) Product should be well packed in a sturdy shipping carton with Please fill out your product registration information and mail it back to us **within 15 days** of your purchase date. Or, you may go to our web site to register your product. Please retain your original receipt in the event that you would need to return the unit for a warranty repair. **Phone Number:** Street Address: **Email Address:** Name: State: City: Zip:

Setup & Operation Instructions

ICOtec GC101XI Flectronic Predator Call

Load Batteries

Slide open battery panel on back of unit, place 4 new AA batteries as indicated then close panel. Lithium batteries for best results in cold conditions.

Turn Power Switch On

Slide switch up, until red LED indicator light is on. If it does not light up, open panel and be sure all batteries are new and in proper position.

Select Prey Call

Press button of desired call sound. To play calls in white print on buttons, slide mode switch on side of remote to A, to play those in yellow type, slide the mode selector switch to the B. You can play a second call by selecting a second button, you may switch between mode A or mode B for second call.

Adjust Volume

Press volume up arrow for louder or volume down arrow for quieter.

Add Second Call

Press second desired call sound, both calls play until you select STOP.

End Calls

Press STOP.

Predator Calls

Cottontail Distress Gray Fox Distress Coyote Female **Jack Rabbit Distress Coyote Pup Distress Woodpecker Distress Mouse Voles Crow Baby Distress** Coyote Yip/Howl Coyote Male **Red Fox Distress Fawn Distress**

Trouble Shooting:

Unit does not play calls - Be sure batteries are NEW and are installed properly, if you press a call button on the remote and the red LED light blinks on the remote, you need to replace the 23A battery in the remote. Remove the screw holding on the battery door, remove, dispose of properly and replace as indicated.

Check out more of our products at your favorite retailer or online at icotec.com.

If your retailer does not yet carry our products, ask them to. To find a dealer near you, log on to icotec.com and select the Dealer List



ICOtec hats are coming soon!

6415 Angola Road

ATTN: Warranty Department

Mail to:

Holland, OH 43528

www.icotec.com/product-registration/ Or, Log on to **Warranty Registration Card Electronic**