


Segway Reticle Leveler

INSTRUCTIONS


Preparation

- Loosen the scope rings.
- Set variable scopes to low power.
- Separate the two parts of the Segway Reticle Leveler.


How to use your Segway Reticle Leveler

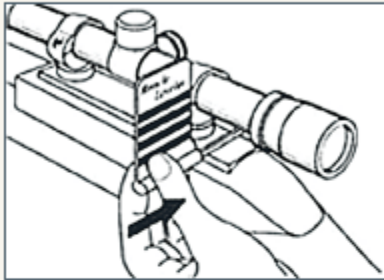


- 1 Insert the alignment bar under the body of the scope, letting it sit on the scope base.

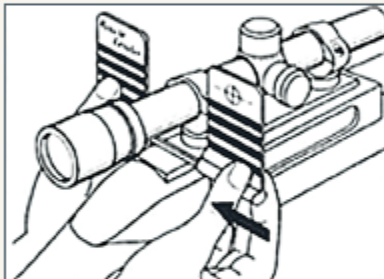

- 2 Slide the right half onto the bar and secure the Segway Reticle Leveler to the gun with a thin rubber band from one hook, around the bottom of the gun, to the other hook.

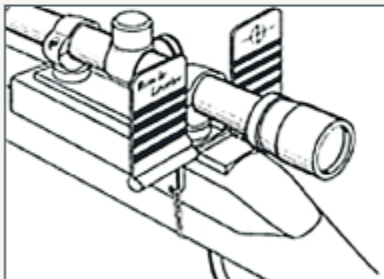

- 3 Make sure that the alignment bar is sitting flat on the scope base.

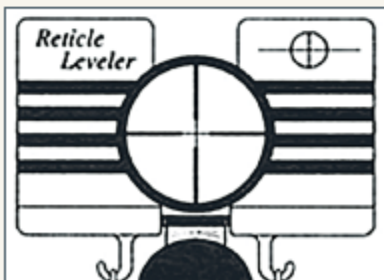

- 4 Rotate the scope so the horizontal crosshair lines up with the reference marks on both sides.

Tighten the scope rings.

Recheck the alignment.

Remove the Segway Reticle Leveler.